

REVISIONS								
REV.	DESCRIPTION	ECO #	DRAWN BY	CHECKED BY	DATE			

INSTRUCTIONS:

- 1. CLOSE OFF DRAIN AND ADD WATER AND CLEANING SOLUTION.
- 2. CONNECT AUTO PUMP TO AIR, EXHAUST & DISCHARGE LINES USING EASY FITTINGS.
- 3. INSERT PUMP INTO CLEANING TUBE.
- 4. ATTACH DISCHARGE HOSE TO FLUID RETURN PORT AND OPEN BALL VALVE.
- 5. EXHAUST HOSE TO BE POINTING AWAY FROM THE OPERATOR. SOME SPRAY MAY COME OUT TUBING ON THE FIRST FEW CYCLES.
- 6. SET REGULATOR TO 10 PSI AND OPEN BALL VALVE. (MINIMUM PRESSURE REQUIRED)
- 7. CYCLE PUMP FOR TIME REQUIRED TO CLEAN PUMP.
- UNISTRUT 8. TO EVACUATE WATER FROM PUMP AND DISCHARGE HOSE, ATTACH FILTER/REGULATOR QUICK CONNECT TO PUMP EXHAUST HOSE. STARTING AT 0 PSI BRING PRESSURE UP SLOWLY UNTIL WATER FLOWS.
 - 9. ONCE AIR COMES OUT THE DISCHARGE LINE REMOVE THE PUMP WITH THE AIR ON.
 - 10. WITH THE PUMP REMOVED FROM THE CLEANING TUBE TURN THE REGULATOR BALL VALVE OFF.

11. DISCONNECT THE REGULATOR FROM THE EXHAUST LINE. CLOSE THE DISCHARGE BALL VALVE AND DISCONNECT THE DISCHARGE LINE FROM THE CAM LOCK. THEN REMOVE EASY FITTINGS AIR, EXHAUST & DISCHARGE LINES FROM THE PUMP.

> AIR, EXHAUST & DISCHARGE EASY FITTINGS

UNISTRUT

	J					
	UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN INCHES AND INCLUDE PLATING	DRAWN BY L.N.	date 1-5-12		QED	
- 20"	REMOVE ALL BURRS	CHECKED BY	DATE	Environmental System		
~20"	TOLERANCES	DHE	1-5-12	6155 JACKSON ROAD, ANN ARBOR, MI. 48103		
	XX +/01 FRACT +/- 1/64	APPROVED BY	DATE	TITLE		
	XXX +/005 ANGLES +/- 1/2 OTHER TOLERANCES	D.C.	1-5-12	CLEANING STAND		
	AS SPECIFIED			for autopumps dual		
	NEXT ASSY _	MATERIAL -		DWG. NO. Cleaning Fixture Dual Tupes		
	USED ON -	FINISH -		scale 1:12	SHEET OF	