
Installation For Vacuum Cap

- 1. Install regulator / gage to cap.
- 2. Attach spacer and bracket to cap using the two 1/4 hex bolts (supplied).
- 3. Slide the regulator through the bracket.
- 4. Thread the plastic nut to the regulator and tighten.
- 5. Attach the hose from the regulator to the pump's air supply line.
- 6. Attach the other hose to the supply line.
- 7. Attach the other end to the regulator using the quick connect fitting.

NOTE: 1/4" nuts and 1/4" washers are not used.

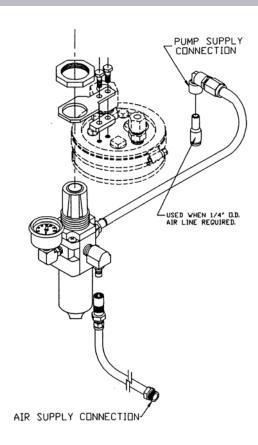

Installation For Slip Fit Cap

- 1. Install regulator / gage to cap.
- 2. Attach spacer and bracket to cap using the two 1/4 hex bolts (supplied).
- 3. Slide the regulator through the bracket.
- 4. Thread the plastic nut to the regulator and tighten.
- 5. Attach the hose from the regulator to the pump's air supply line.
- 6. Attach the other hose to the supply line.
- 7. Attach the other end to the regulator using the quick connect fitting.

NOTE: Spacer is not used.

